

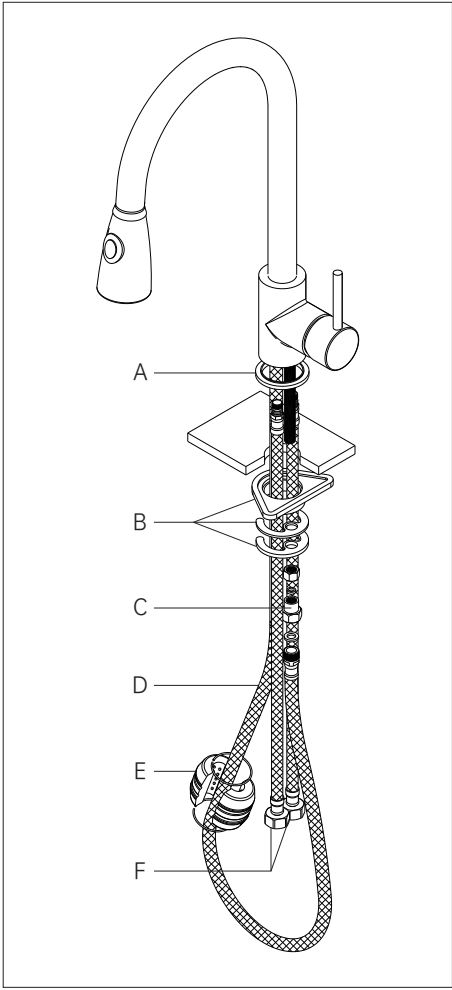


Bom

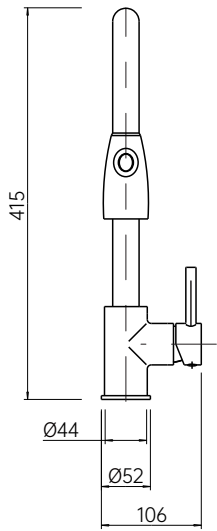

A	Base
B	Locking Assembly
C	Adapter
D	Drawing tube
E	Black Weight
F	Flexible Tails

Line Drawing

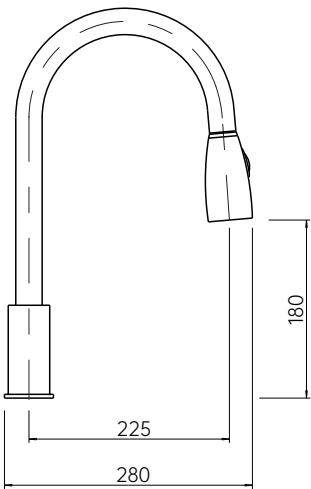

Unit: mm

KITCHEN TAP


MANUAL INSTALLATION



CODE T81015

STEPS


1

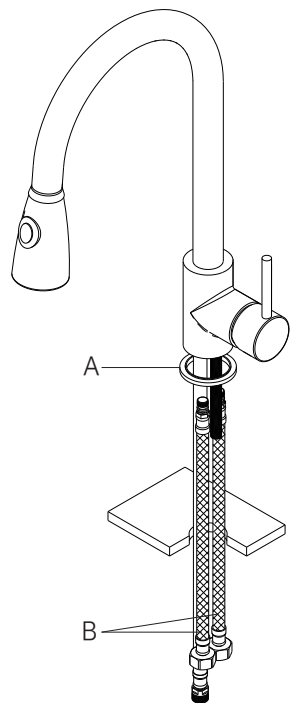

Connect the red and blue braided tubes (B) respectively to the hot and cold water holes at the bottom of the faucet.

Install base (A) on the bottom of the faucet and place the faucet and braided tube into the mounting hole.


2

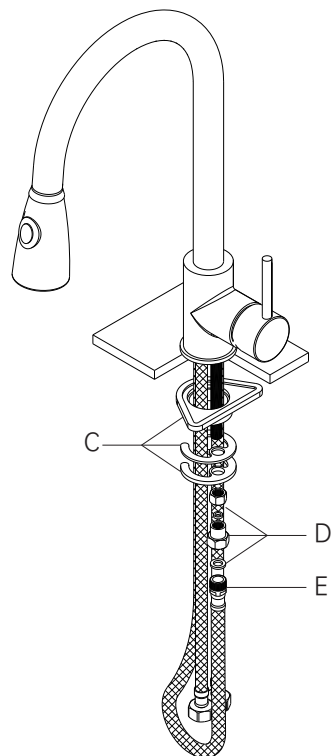

Put the locking assembly (C) into the fixing tube and lock them tightly.


Connect the drawing pipe (E) to connector (D) and install it on the copper pipe.

3

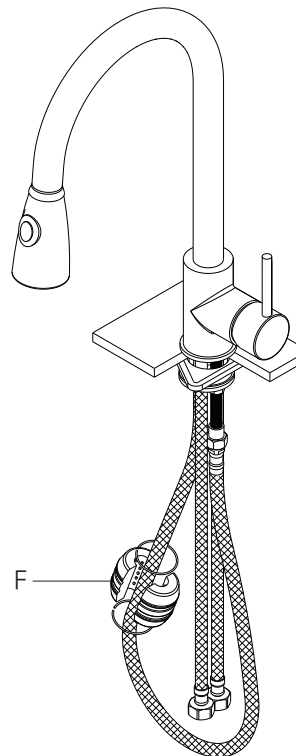

Install black weight (F) on the pull pipe.

4

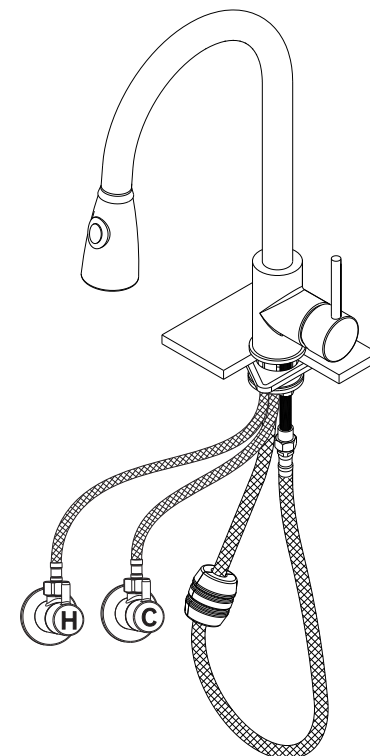

Install the other end of the red and blue braided tube to the hot and cold water valves respectively.